

Instrukcja aktualizacji. Update instructions.

1. Kopia parametrów/backup parameters

<p>1 MAIN MENU</p>	<p>2 SERVICE MENU</p>
<p>3 MANUFACTURERS MENU</p>	<p>4 SERVICE MENU</p>
<p>5 ANTI-FREEZE ALGORITHM</p>	<p>6 ANTI-FREEZE ALGORITHM</p>
<p>7 SERVICE MENU</p>	<p>8 SERVICE MENU</p>
<div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>Save</p> </div> <div style="text-align: center;"> <p>Update</p> </div> <div style="text-align: center;"> <p>Set</p> </div> </div> <div style="text-align: center; margin-top: 10px;"> <p>RECUPERATOR CONTROLLER DISP: 3.0-r5 (b691) MOD: 3.0-r4BTL: F8-C4-53-67</p> </div>	

2. Płyta główna / mainboard

1




2



3



4

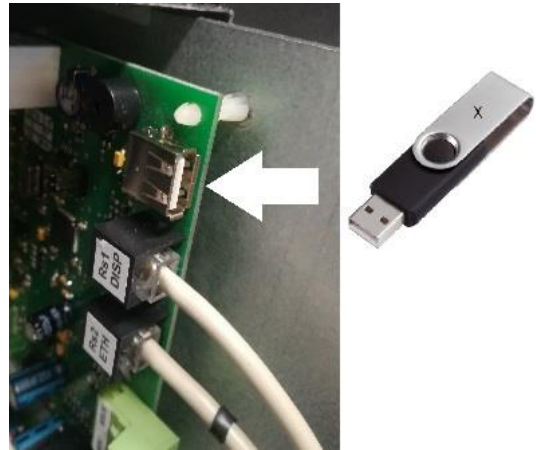

5




6








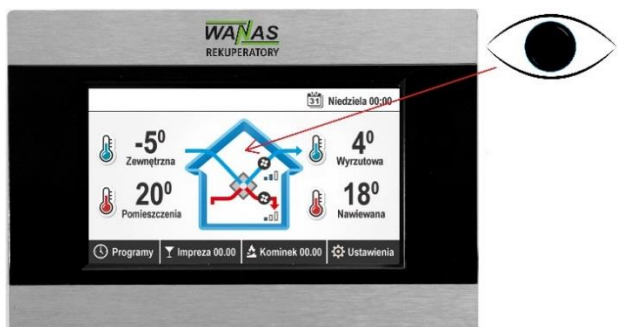


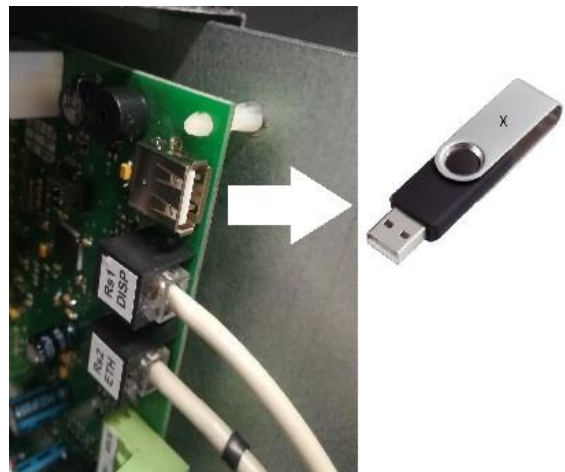

7



8



3. Wyświetlacz / display

<p>1</p> <p>OFF</p>  <p>WANAS</p>	<p>2</p> 
<p>3</p> <p>Check wires!</p>  <p>WANAS</p>	<p>4</p> <p>ON</p>  <p>WANAS</p>
<p>5</p> <p>WAIT!</p>  <p>~120seconds</p>	<p>6</p>  <p>WANAS REKUPERATORY</p>
<p>7</p> <p>OFF</p>  <p>WANAS</p>	<p>8</p> 
<p>9</p> <p>ON</p>  <p>WANAS</p>	<p>10</p>  <p>WANAS</p> <p>RECUPERATOR CONTROLLER DISP: 3.0-r6 (b691) MOD: 3.0-r5 BTL: F8-C4-53-67</p>